

For use with Security+ 2.0 Garage Door Openers. The code between the the remote control and the receiver changes with each use, randomly accessing over a billion new codes. Refer to your product manual for the location of the learn button.

NOTE: Your product may look different than the products illustrated in this manual.

Single Button Remote Control  
Model E940M



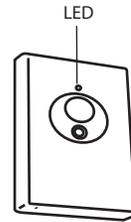
3-Button Mini Remote Control  
Model E945M



3-Button Remote Control  
Model E943M





4-Button Remote Control  
Model E950M



Wireless Wall Control  
Model E128M



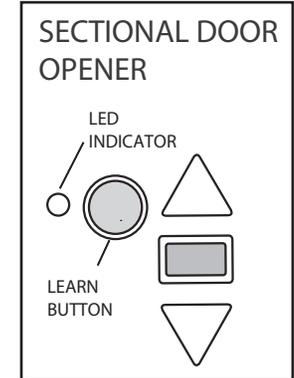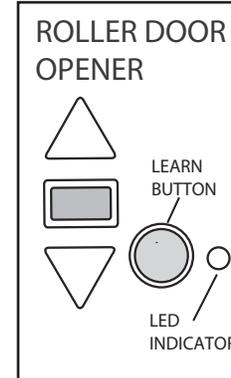Wireless Wall Control  
Model E138M



### ⚠ WARNING

To prevent possible SERIOUS INJURY or DEATH from a moving gate or garage door:

- ALWAYS keep remote controls out of reach of children. NEVER permit children to operate, or play with remote controls.
- Activate gate or door ONLY when it can be seen clearly, is properly adjusted, and there are no obstructions to door travel.
- ALWAYS keep gate or garage door in sight until completely closed. NEVER permit anyone to cross path of moving gate or door.

### PROGRAM USING THE GARAGE DOOR OPENER

- 1 Locate the learn button.
- 2 Press and hold the button on the remote control or wireless wall control you wish to use. The LED indicator on the transmitter flashes continuously (except E945M).
- 3 Press and immediately release the Learn button.
- 4 "click" "click"  
The opener light flashes or 2 clicks are heard when it has learnt the code.

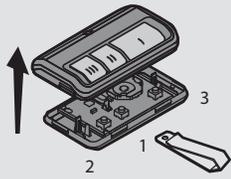
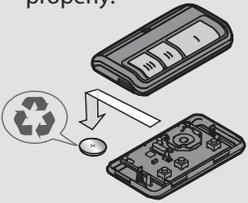
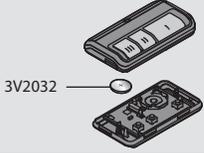
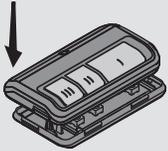
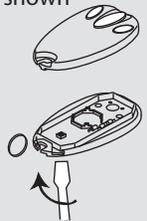
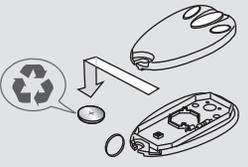
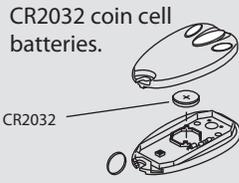
 
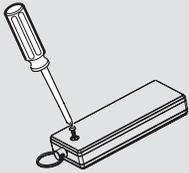
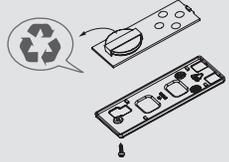
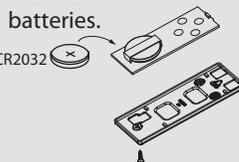
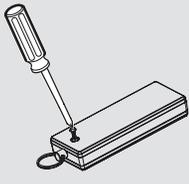
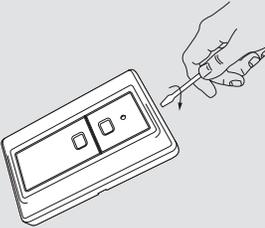
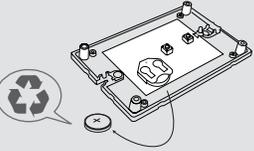
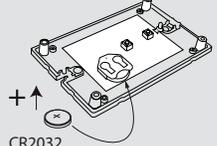
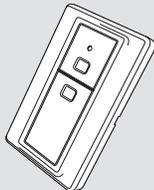
### TO ERASE ALL CODES FROM MEMORY

When deactivating any unwanted remote control code, all previous codes will be erased.

- 1 Press and hold the Learn button on garage door opener until the learn LED goes out (approximately 6 seconds). All previous codes are now erased. Reprogram each remote control you wish to use.

## THE REMOTE CONTROL BATTERY

The lithium battery should produce power for up to 5 years. If the battery is low, the remote control's LED will not flash when the button is pressed. To replace battery:

<p><b>1</b> Pry open the case first in the middle (1), then at each side (2 and 3) with the visor clip.</p> 	<p><b>2</b> Remove the old battery. Dispose of old batteries properly.</p> 	<p><b>3</b> Insert replacement batteries positive side up. Replace the batteries with only 3V2032 coin cell batteries.</p> 	<p><b>4</b> Replace cover.</p> 
<p><b>1</b> Use a screwdriver blade to pry open the case as shown</p> 	<p><b>2</b> Remove the old battery. Dispose of old batteries properly.</p> 	<p><b>3</b> Insert replacement batteries positive side up. Replace the batteries with only CR2032 coin cell batteries.</p> 	<p><b>4</b> Replace cover.</p> 
<p><b>1</b> Use a screwdriver to open the case as shown</p> 	<p><b>2</b> Remove the old battery. Dispose of old batteries properly.</p> 	<p><b>3</b> Insert replacement batteries positive side up. Replace the batteries with only CR2032 coin cell batteries.</p> 	<p><b>4</b> Replace cover.</p> 
<p><b>1</b> Use a screwdriver blade to pry open the case as shown</p> 	<p><b>2</b> Remove the old battery. Dispose of old batteries properly.</p> 	<p><b>3</b> Insert replacement batteries positive side up. Replace the batteries with only CR2032 coin cell batteries.</p> 	<p><b>4</b> Replace cover.</p> 

## ! WARNING

To prevent possible **SERIOUS INJURY** or **DEATH**:

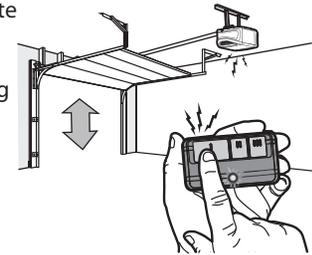
- NEVER allow small children near batteries.
- If battery is swallowed, immediately notify doctor.

To reduce risk of fire, explosion or chemical burn:

- Replace **ONLY** with 3V2032 coin batteries.
- **DO NOT** recharge, disassemble, heat above 212° F (100° C) or incinerate.


## HOW TO USE THE REMOTE CONTROL

Press and hold the button down until the door or gate starts to move. The remote control will operate from up to 3 car lengths away on typical installations. Installations and conditions vary, contact an installing dealer for more information.



## 3-BUTTON REMOTE CONTROLS

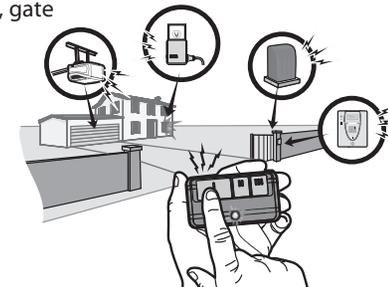Additional buttons on the remote control can be programmed to operate up to 3 devices such as additional garage door openers, light controls, gate operators or access control systems.



## REPLACEMENT PARTS

CR2032 Lithium battery - CR2032  
Visor Clip - 029B137

## ONE YEAR LIMITED WARRANTY

The Chamberlain Group, Inc. warrants to the original consumer purchaser of this product that it is free from defect in materials and/or workmanship for a period of 1 year from the date of purchase.